




B530-A

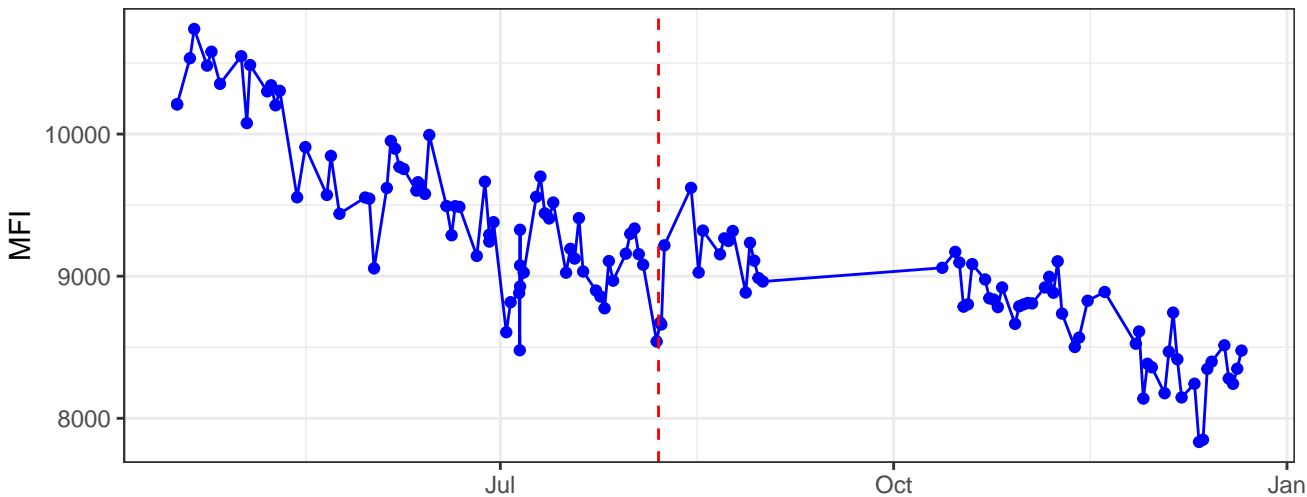


B585-A

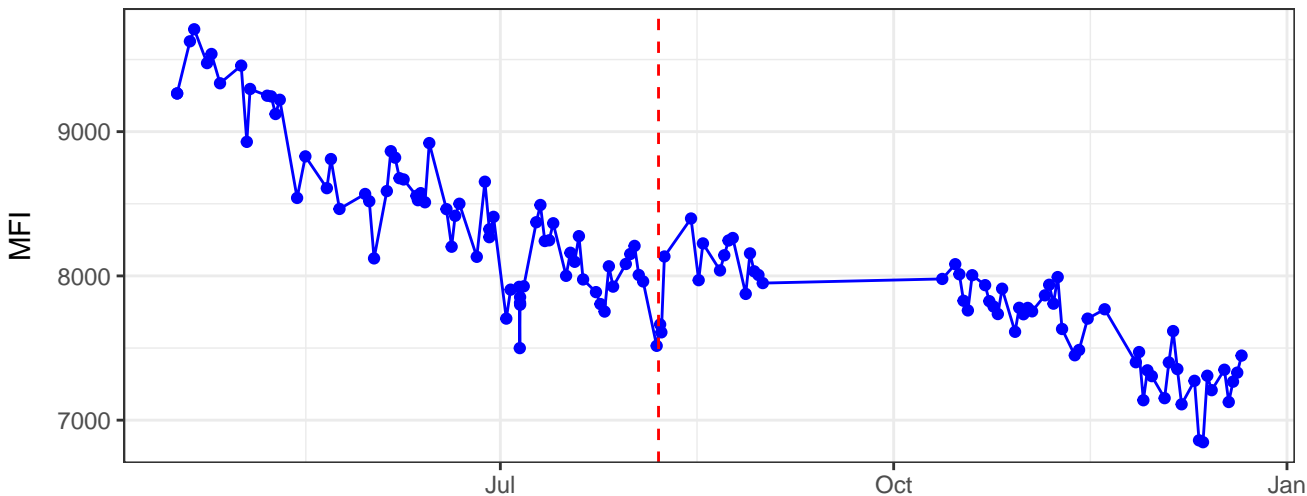


B695-A

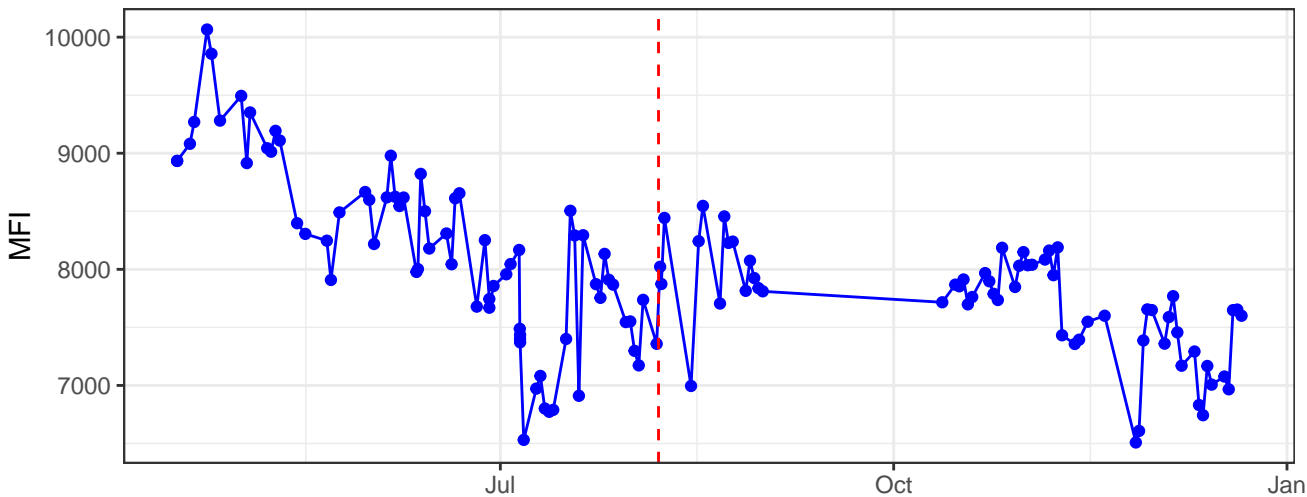


B780-A

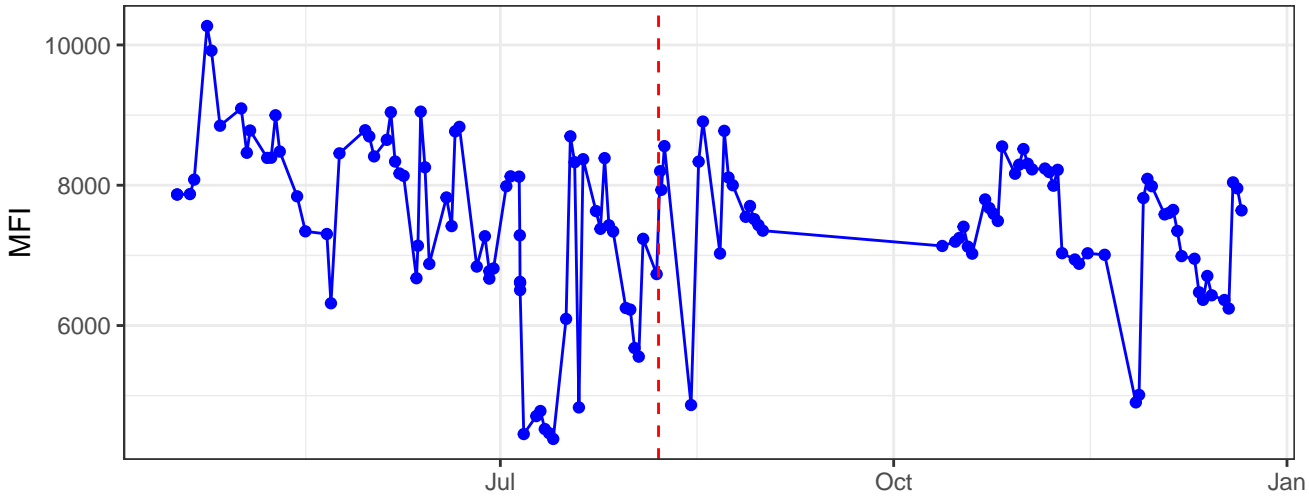


R670-A

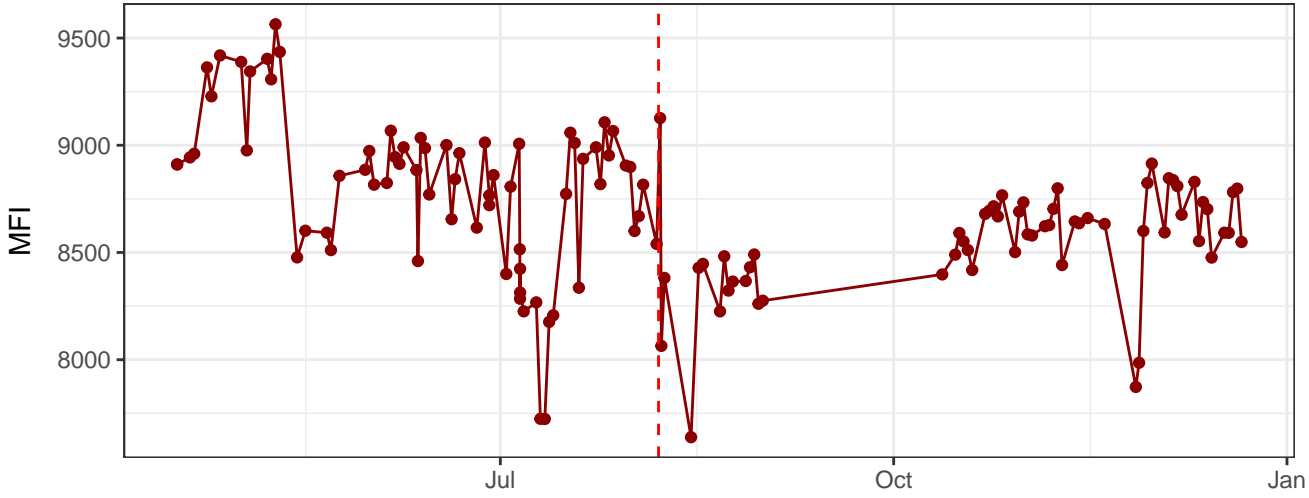


R780-A

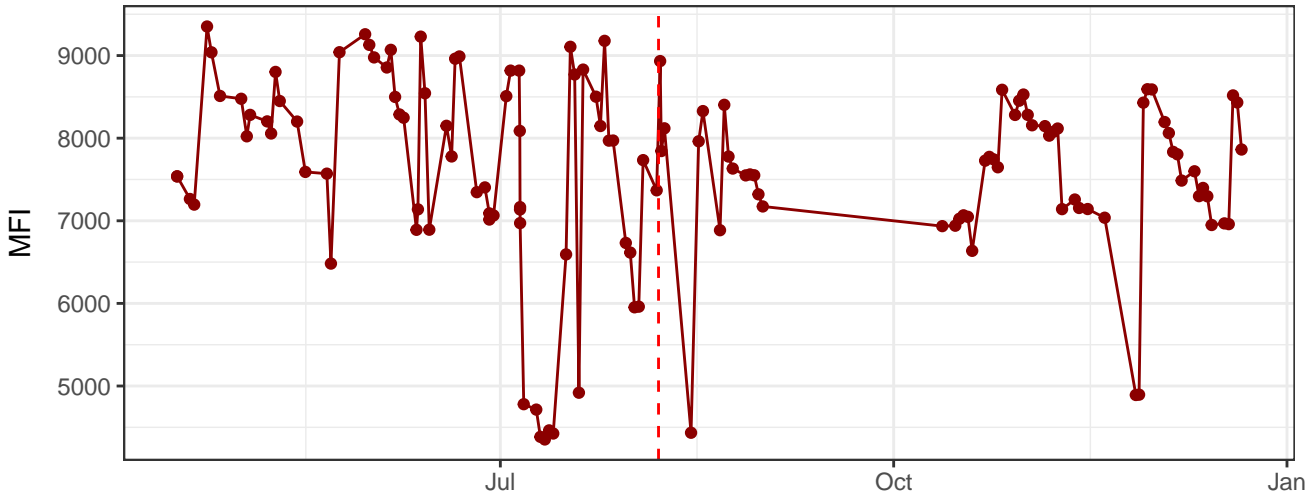


### Blue\_LaserDelay

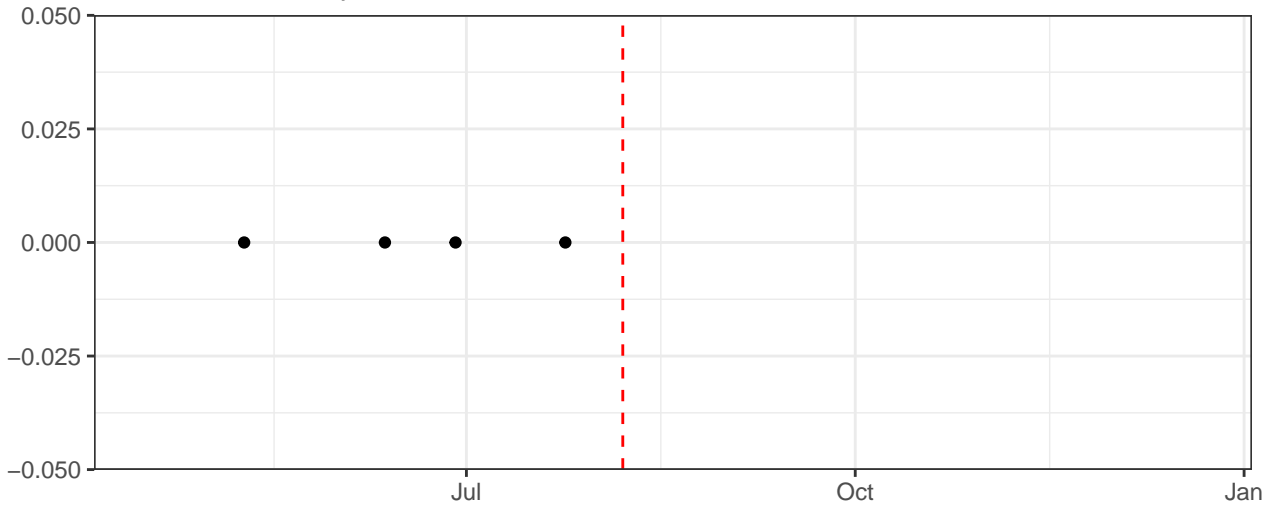


### Red\_LaserDelay

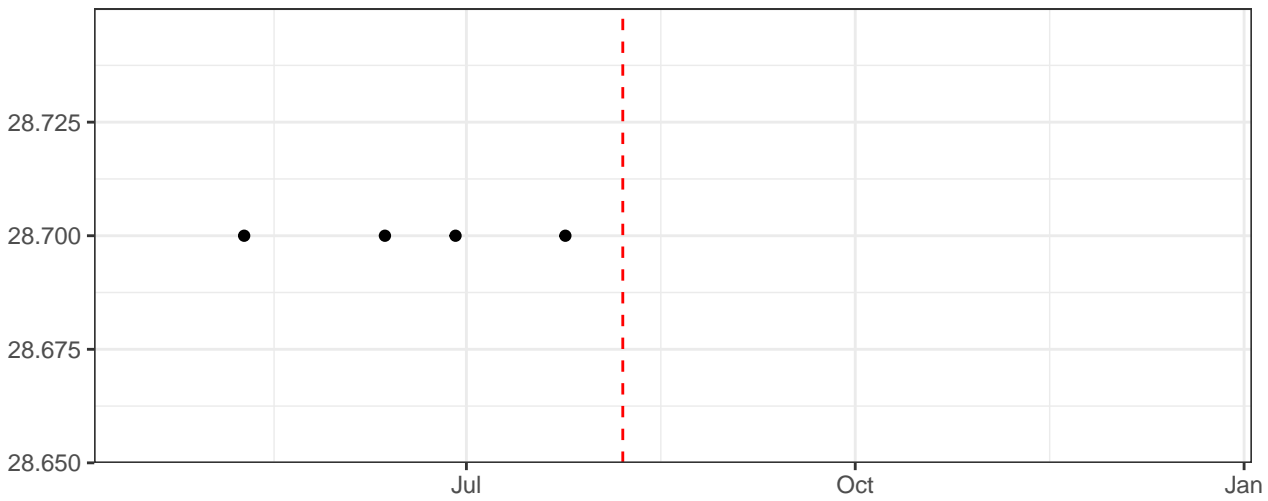


### FSC-A

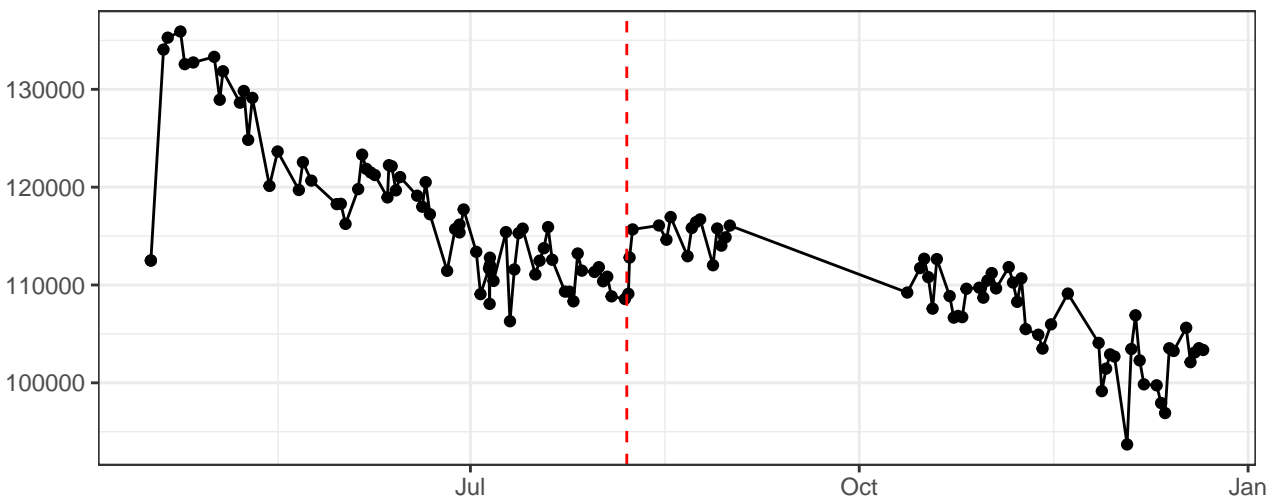


### FSC-H

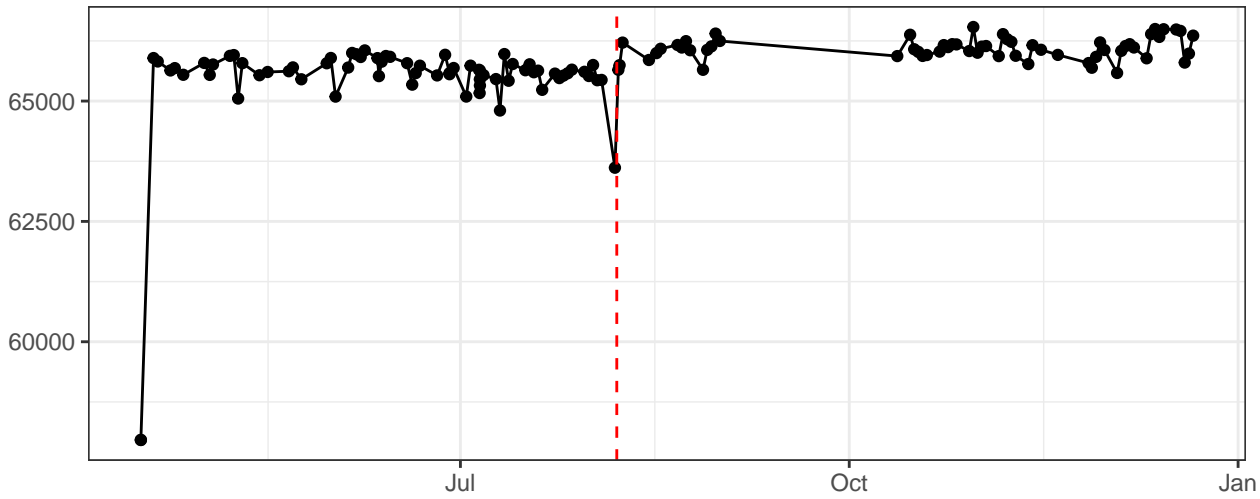


### FSC-W

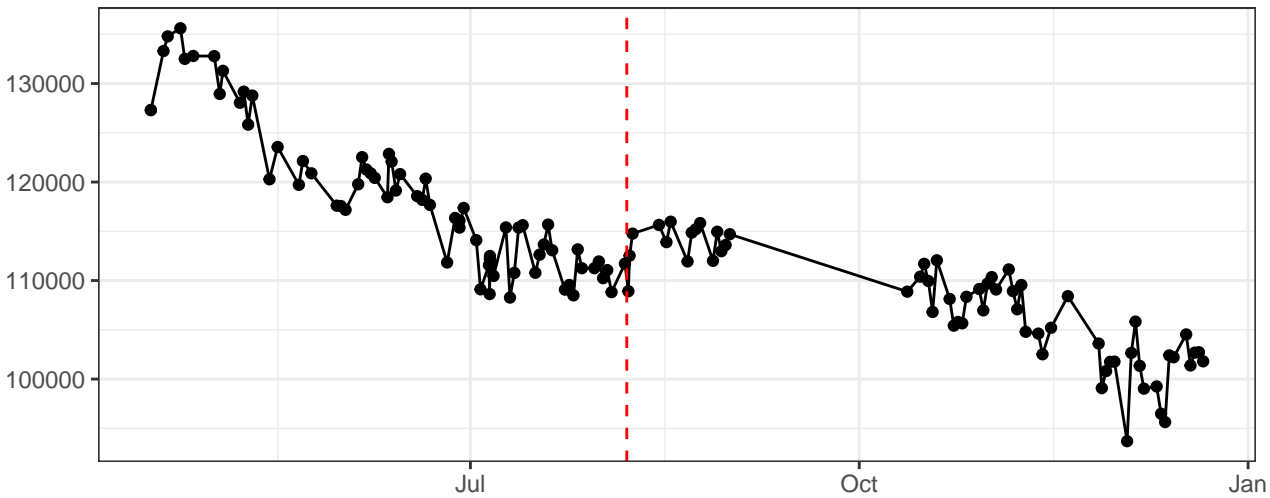


### SSC-A

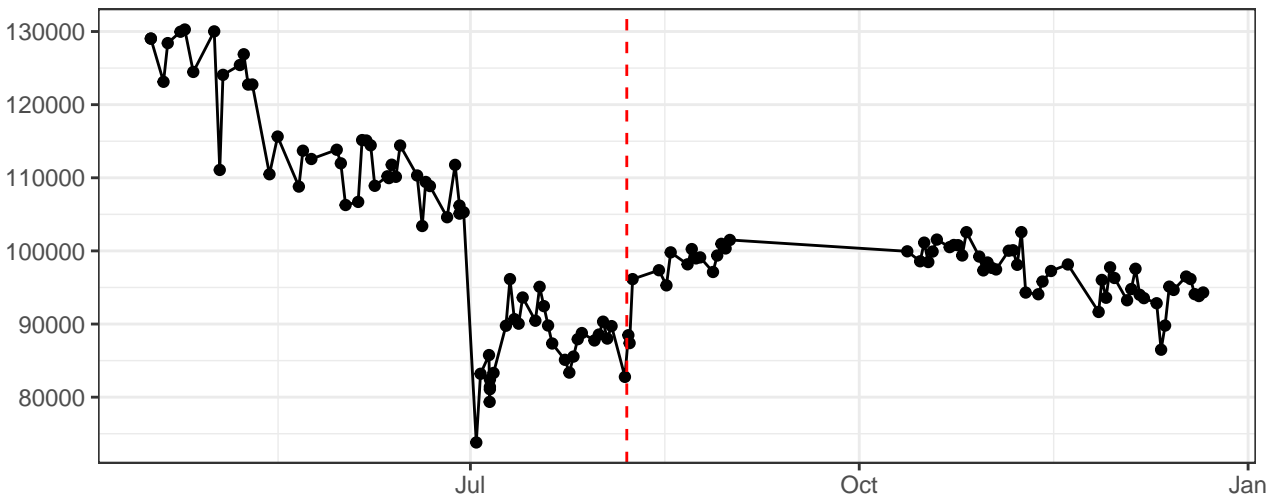


SSC-H

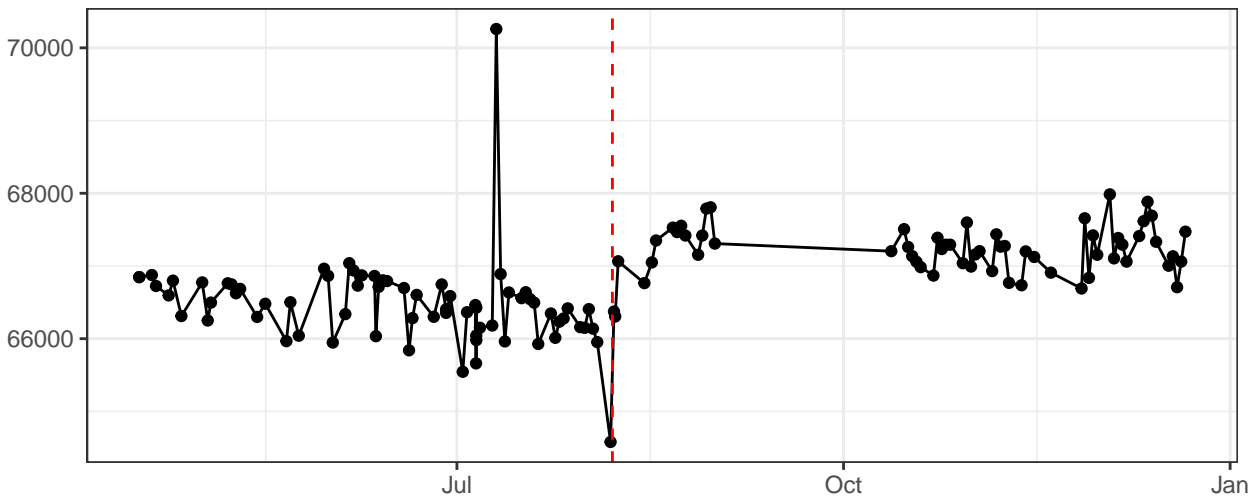


SSC-W

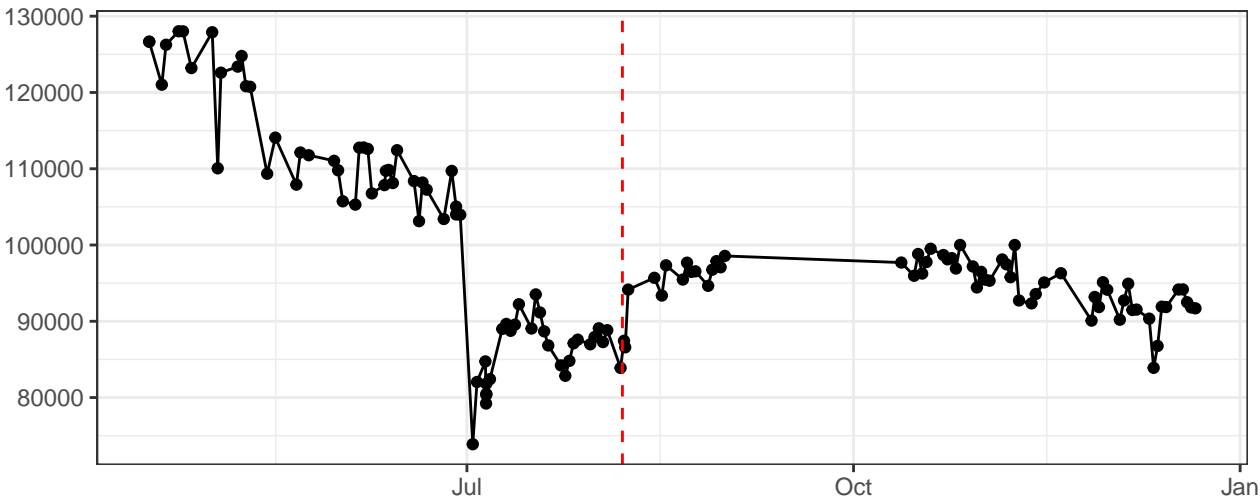


B530-A\_Gain

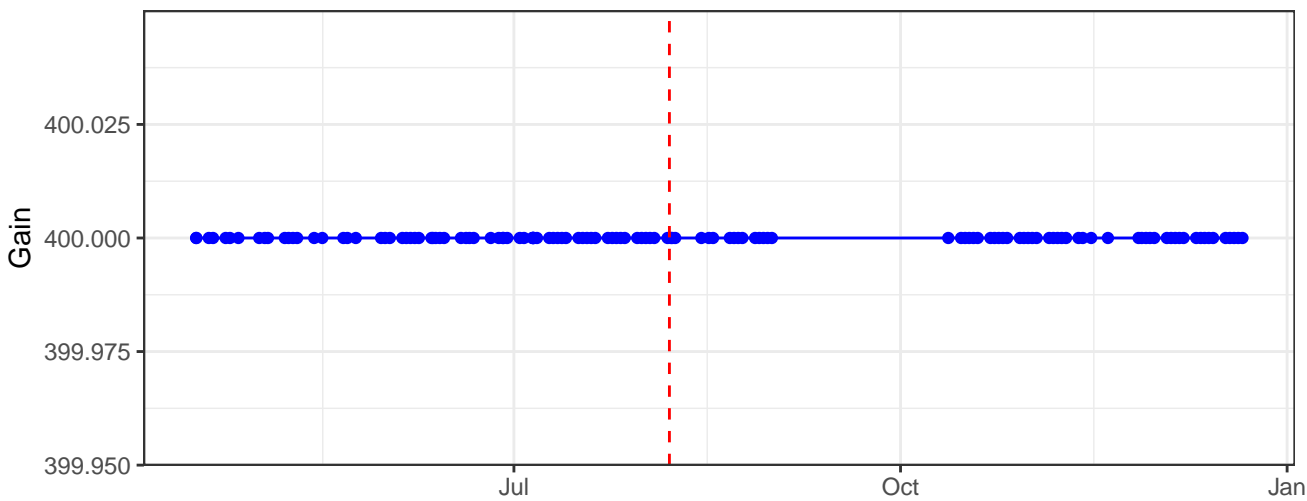


B585-A\_Gain

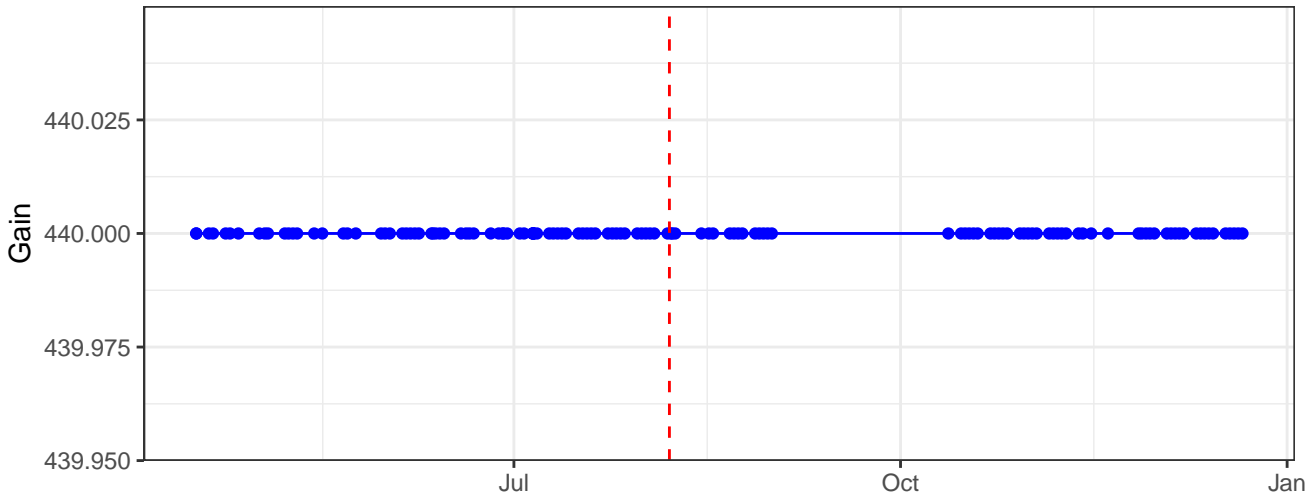


B695-A\_Gain

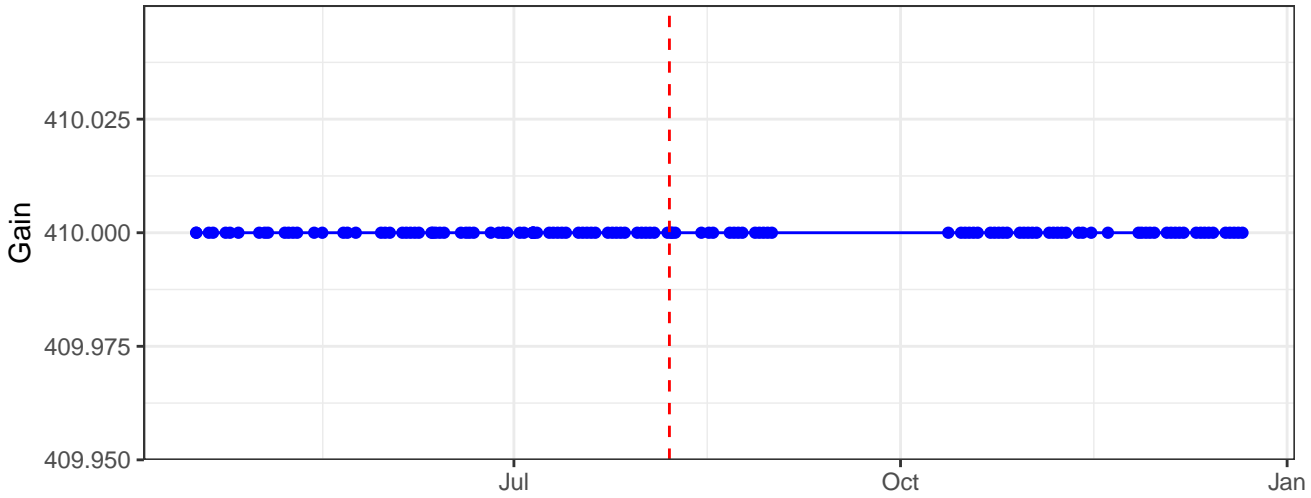


B780-A\_Gain

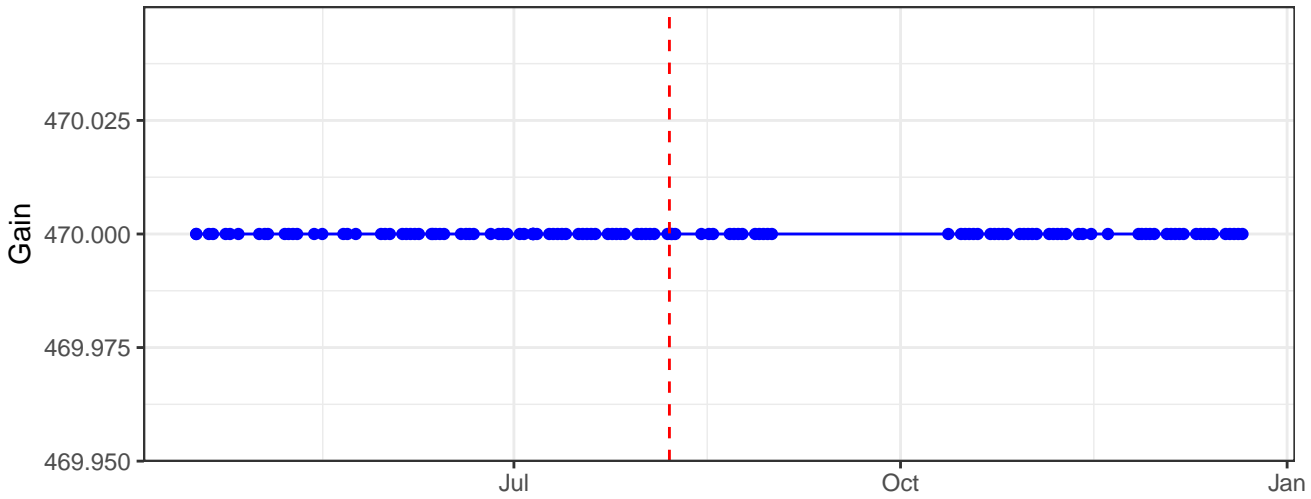


R670-A\_Gain

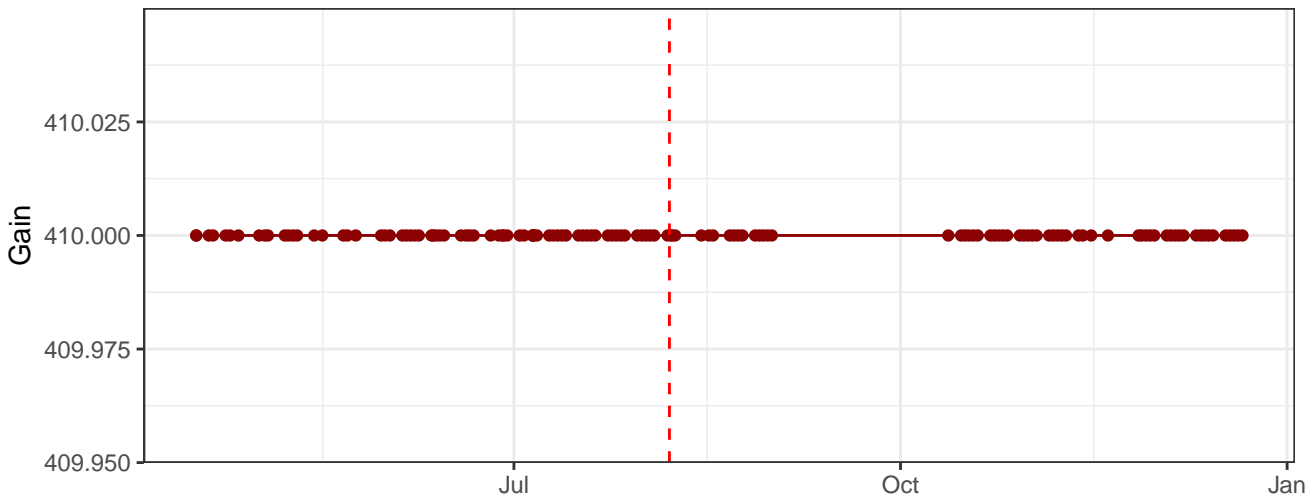


R780-A\_Gain

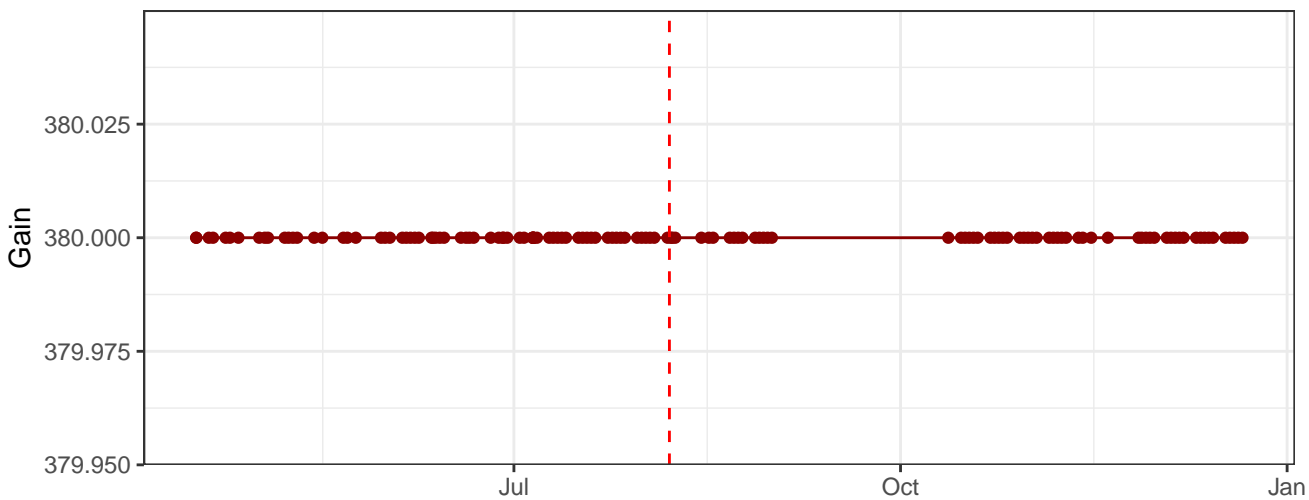


FSC-A\_Gain

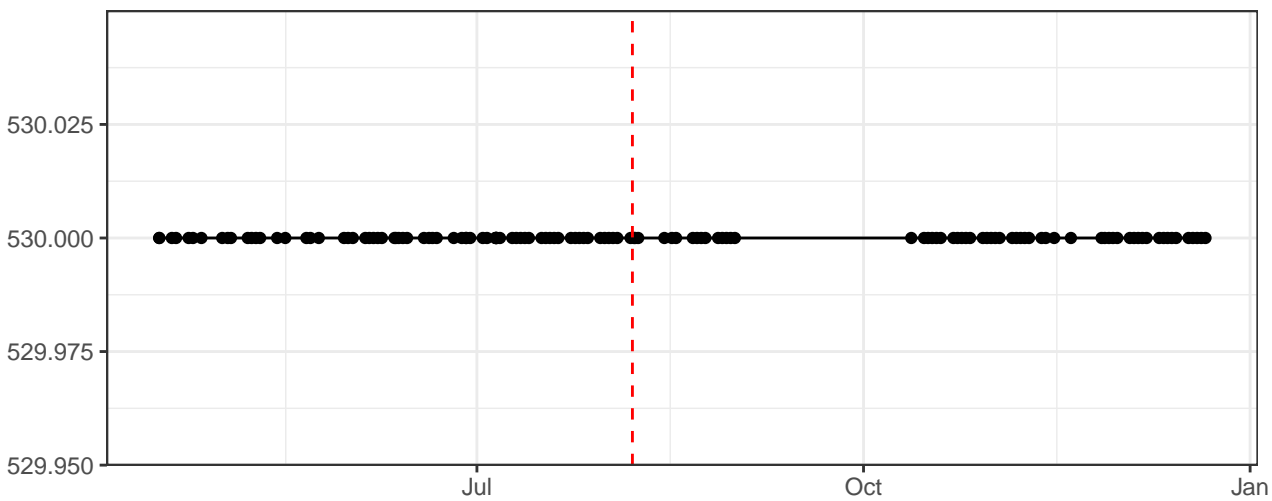


### SSC-A\_Gain

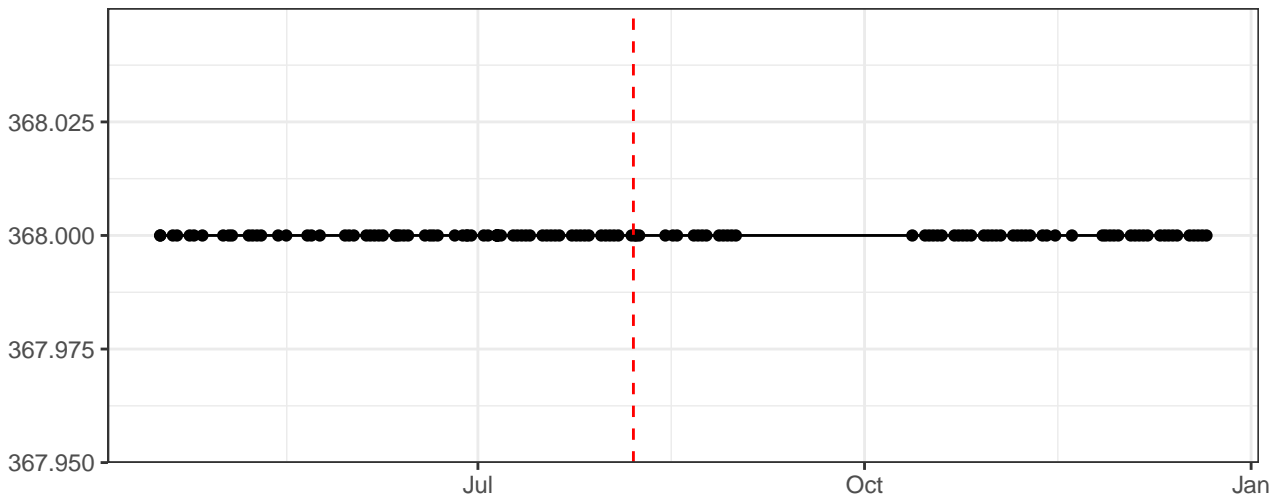

### Blue\_LaserDelay

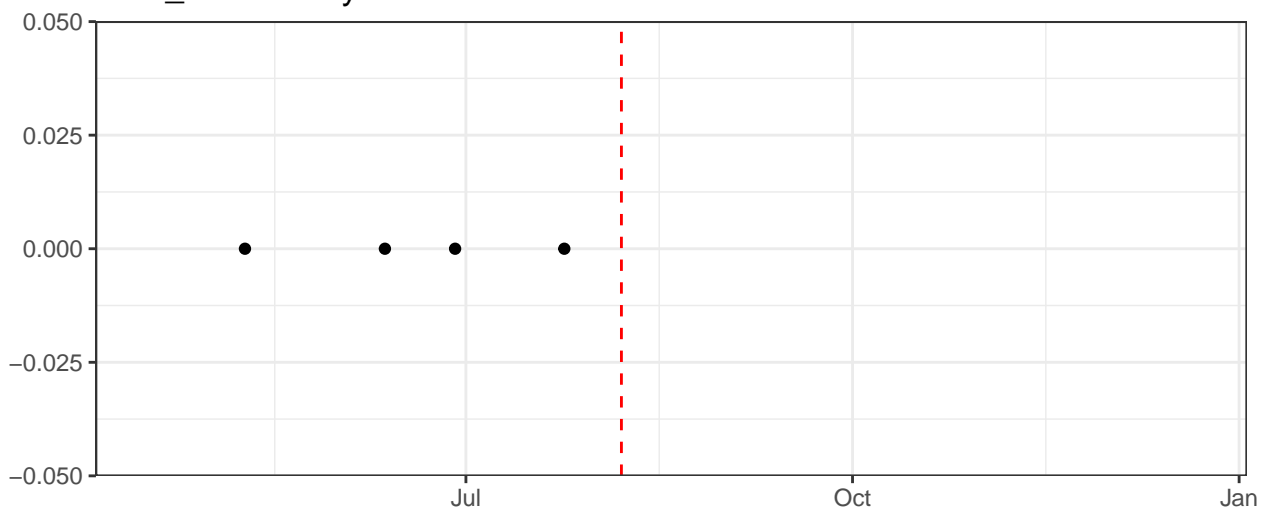


### Red\_LaserDelay

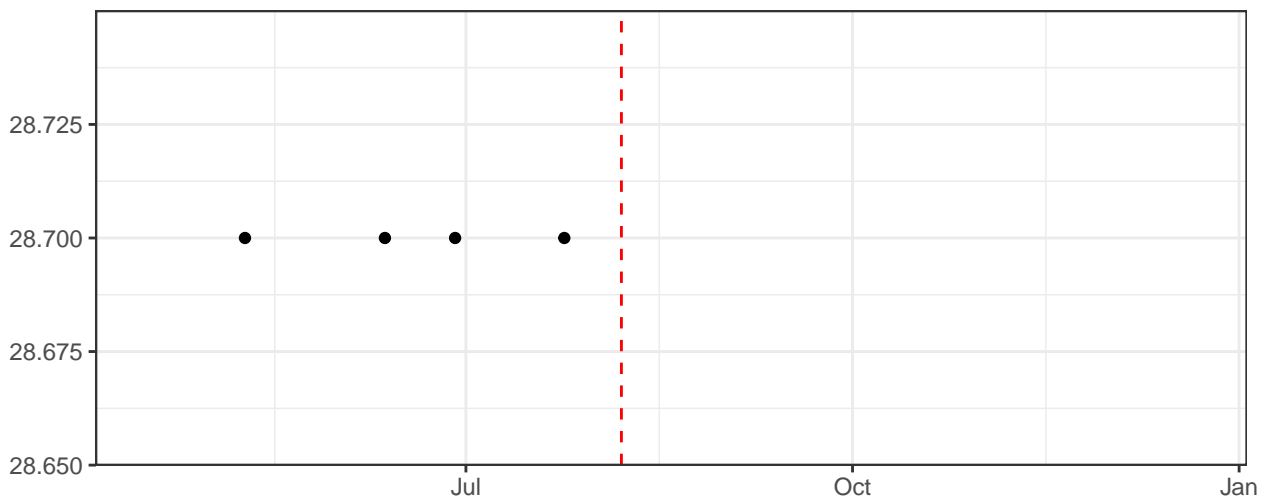



Blue\_AreaScalingFactor

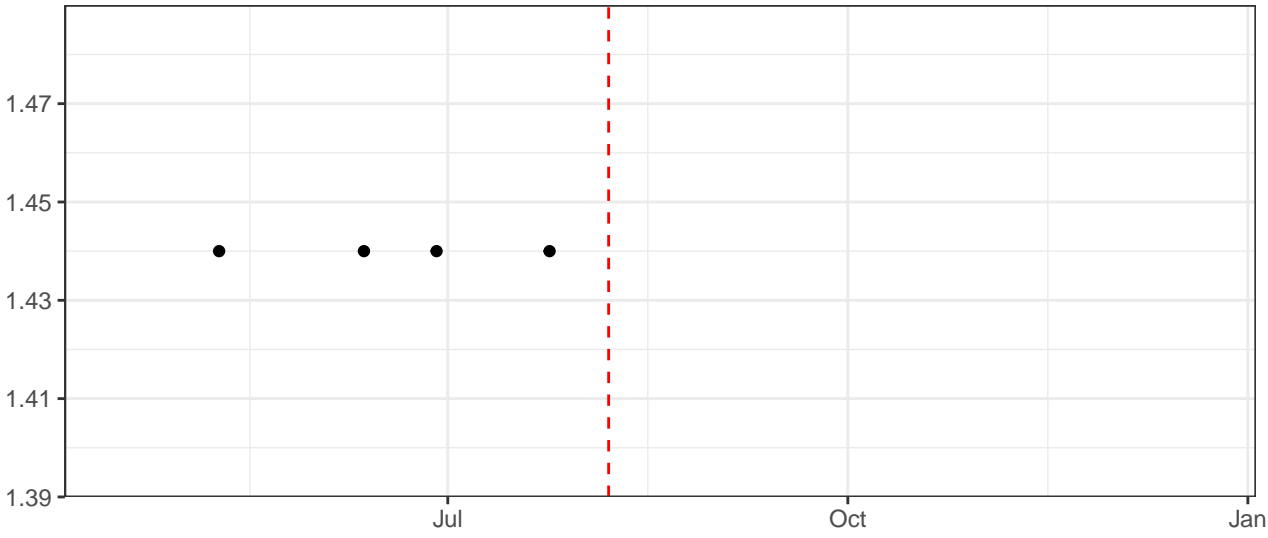

Red\_AreaScalingFactor

