




**B530-A**

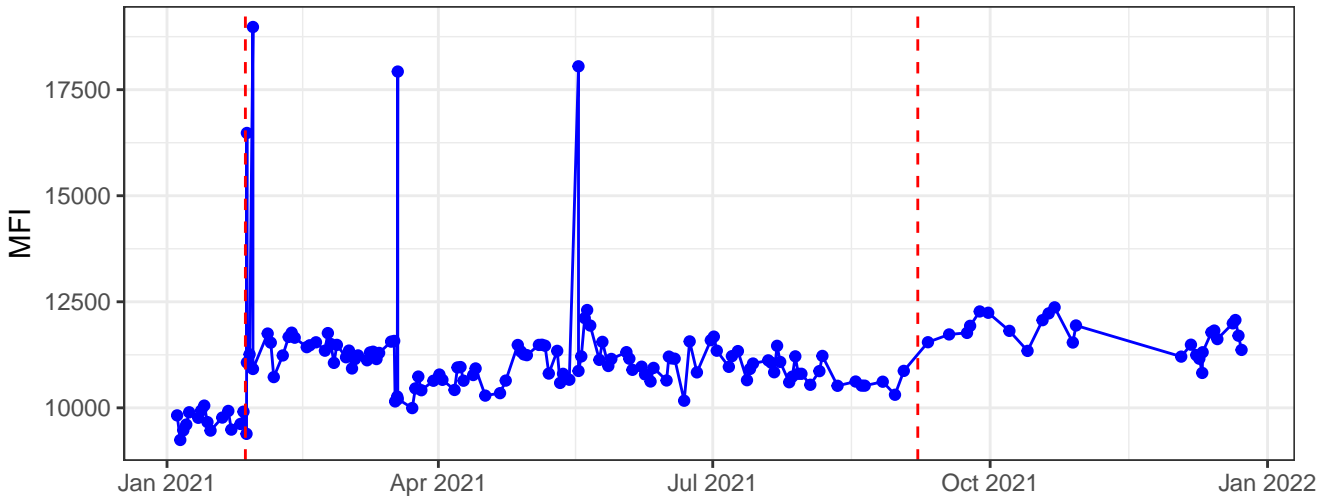

**B585-A**

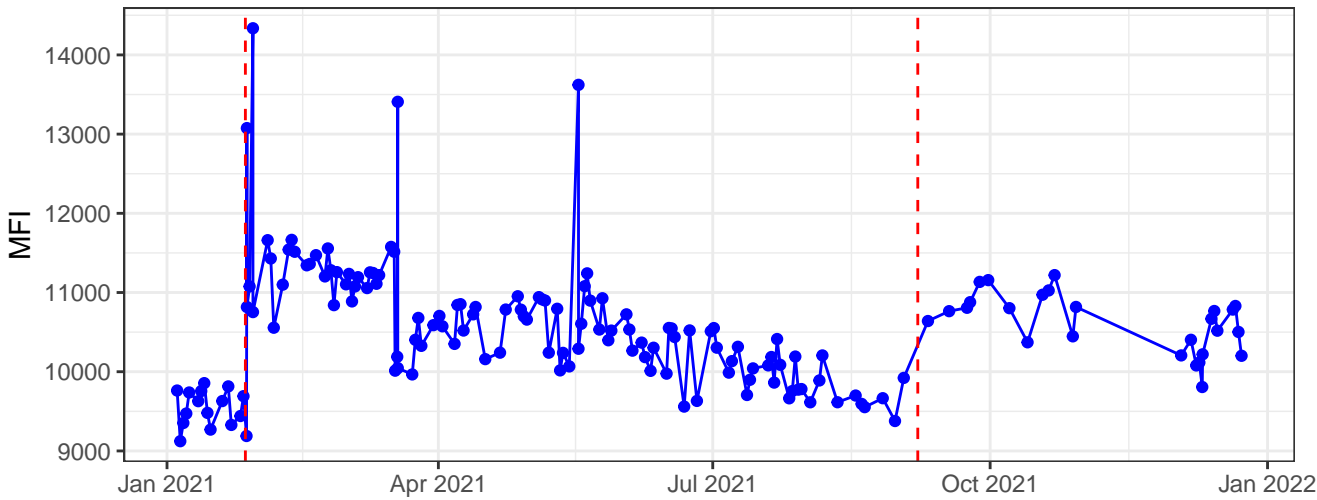

**B695-A**

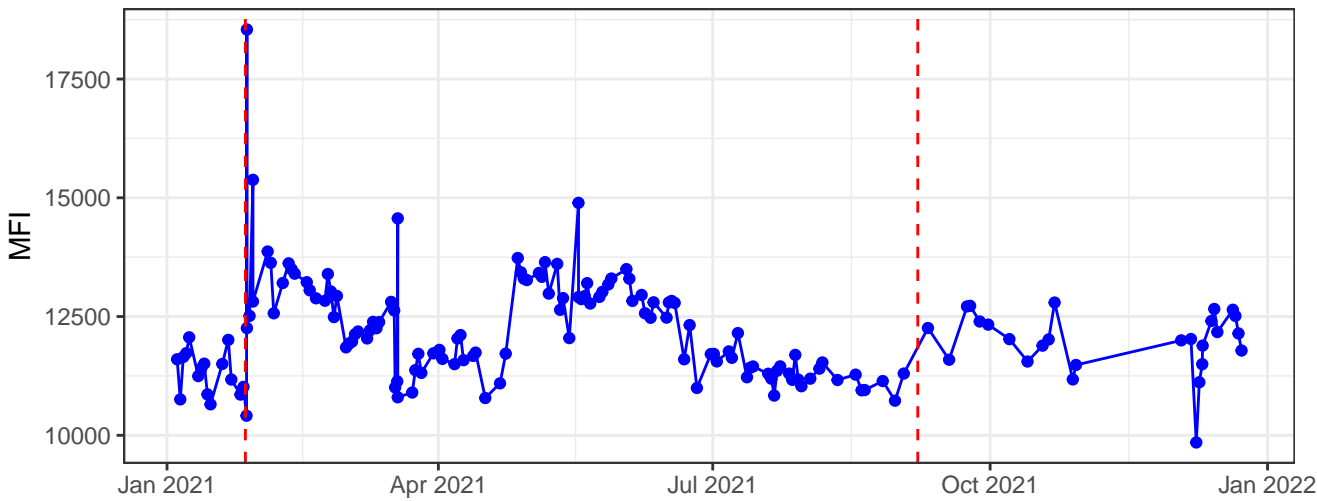


### B780-A




### R670-A




### R780-A

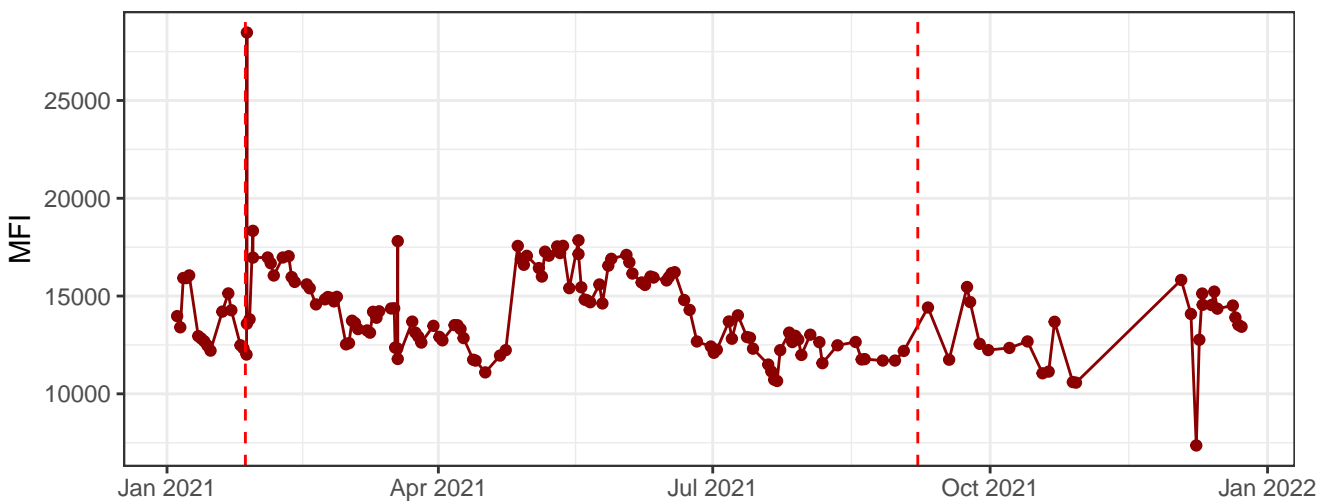


### Blue\_LaserDelay

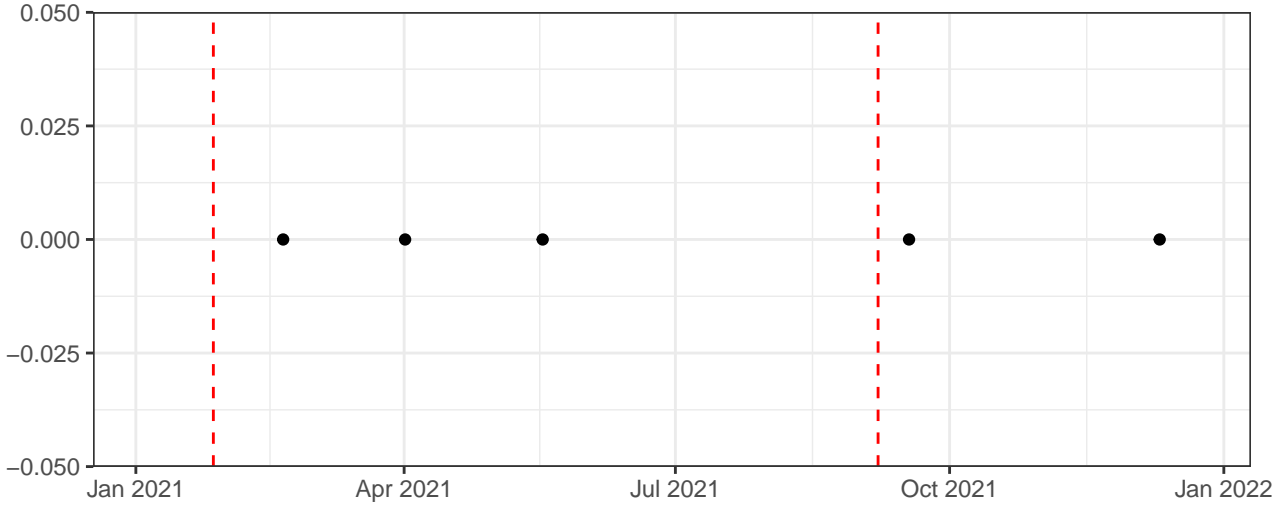


### Red\_LaserDelay

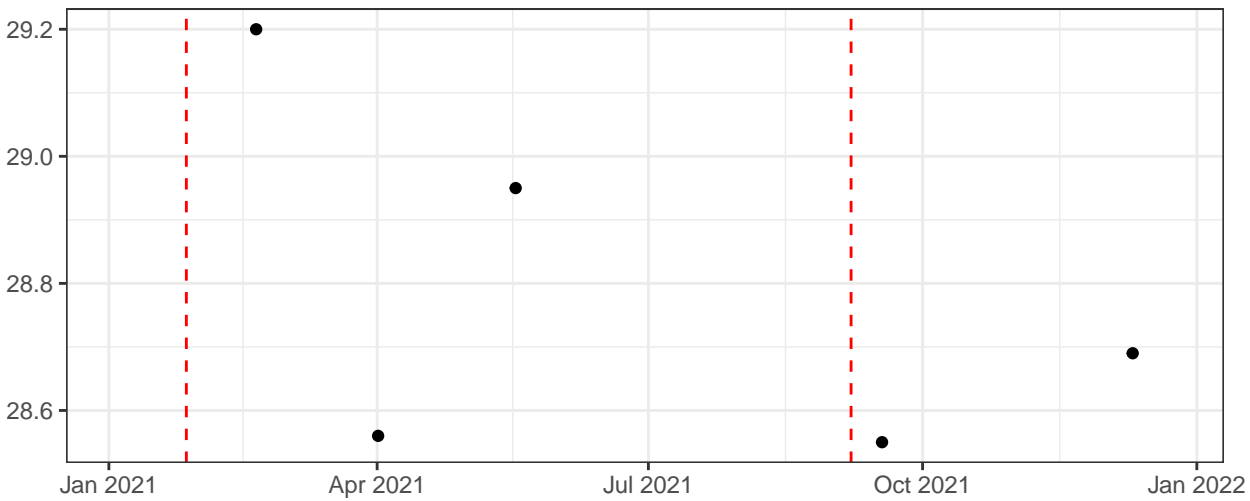


### FSC-A

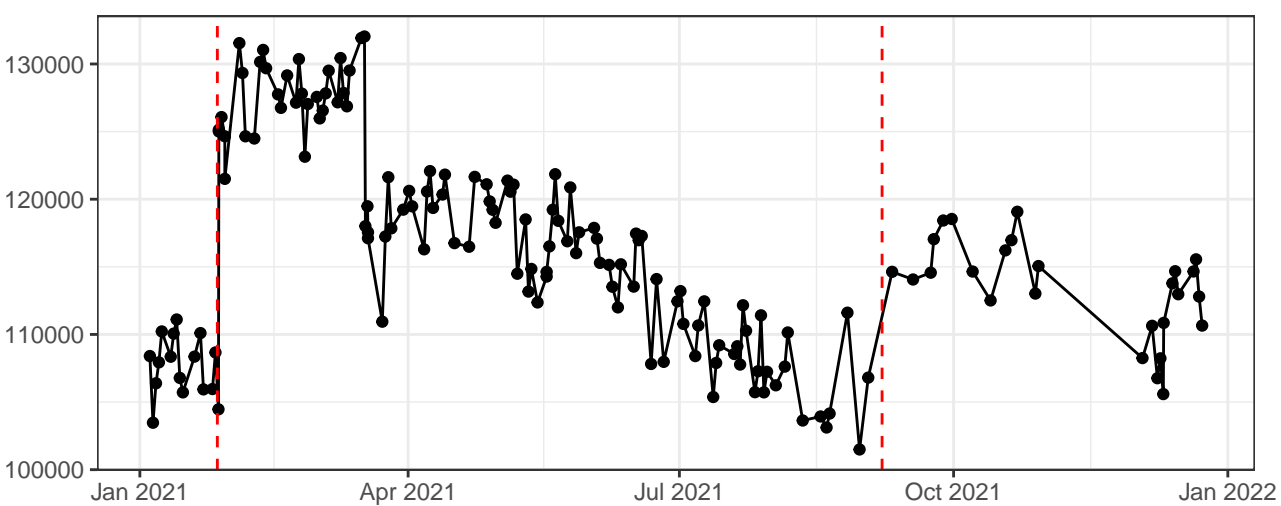


### FSC-H

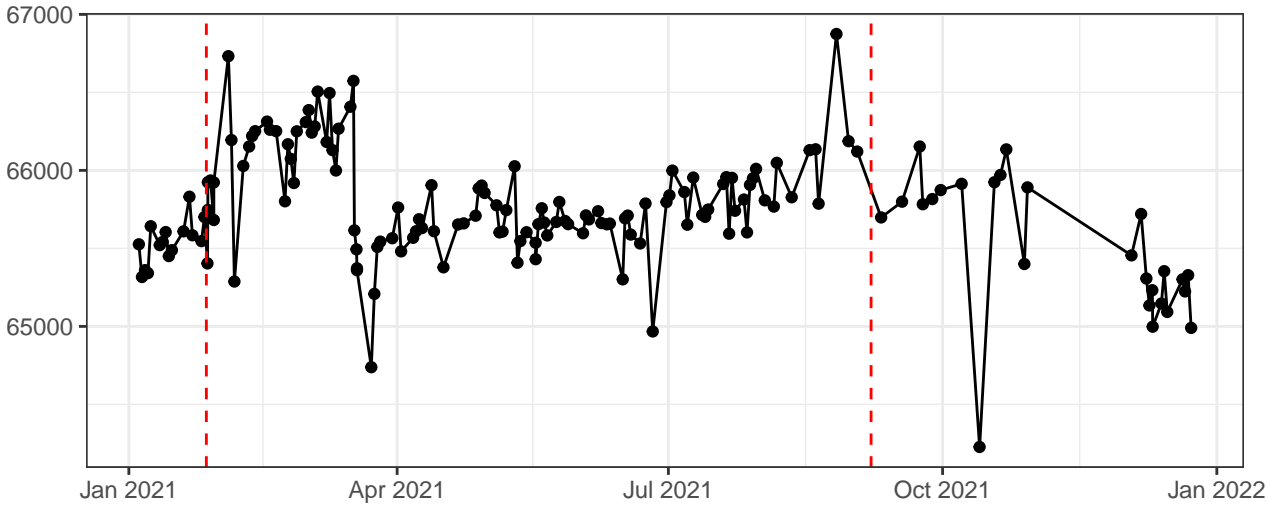


### FSC-W

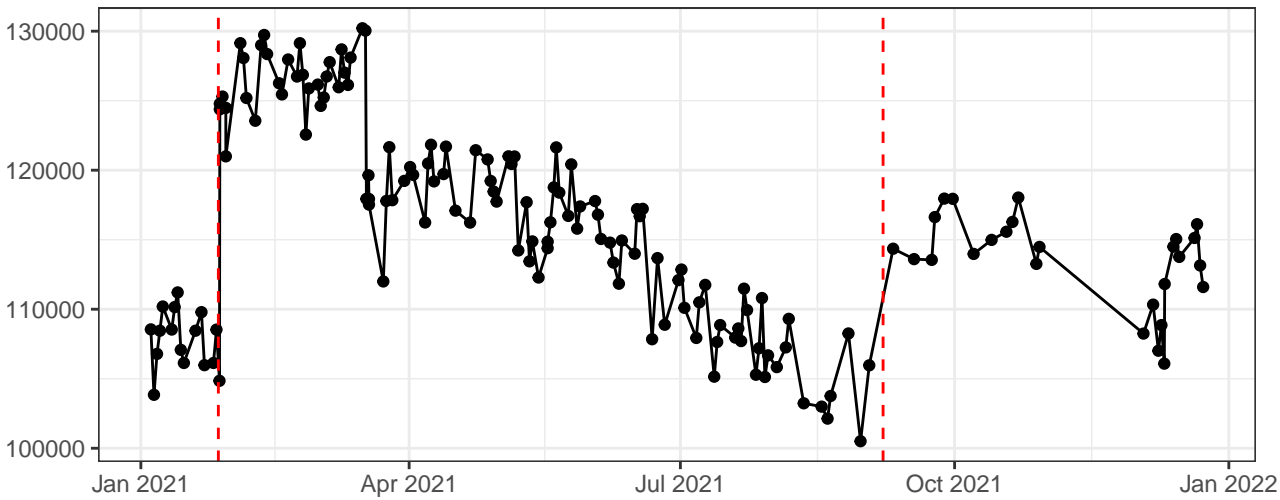


### SSC-A

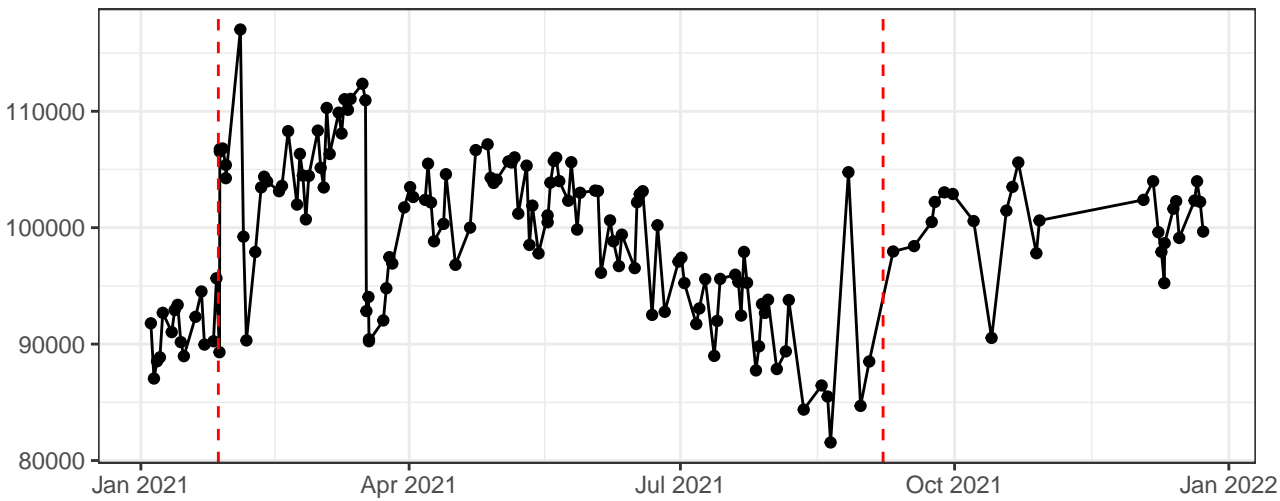


### SSC-H

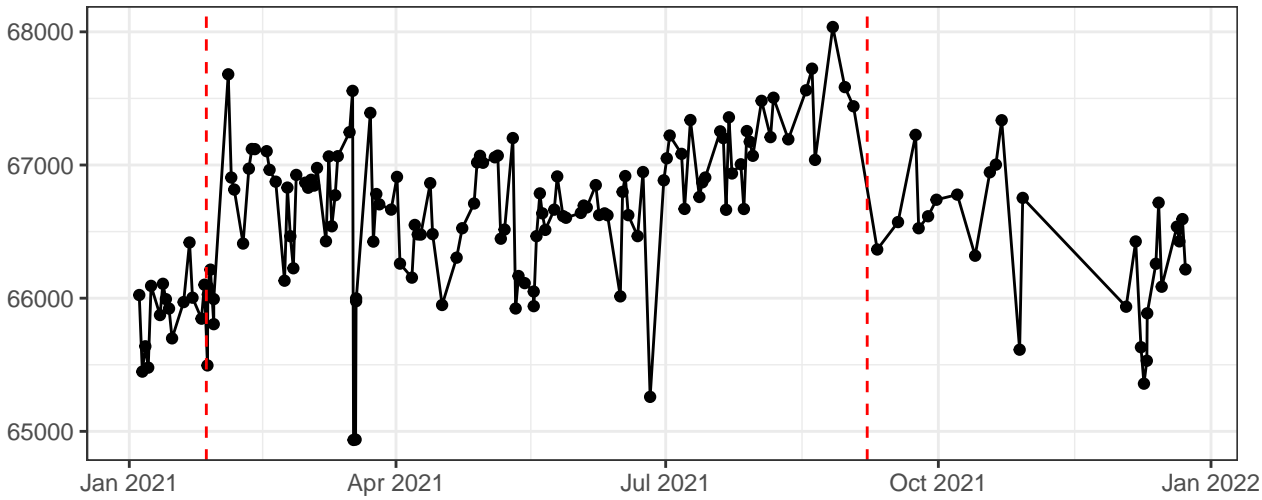


### SSC-W

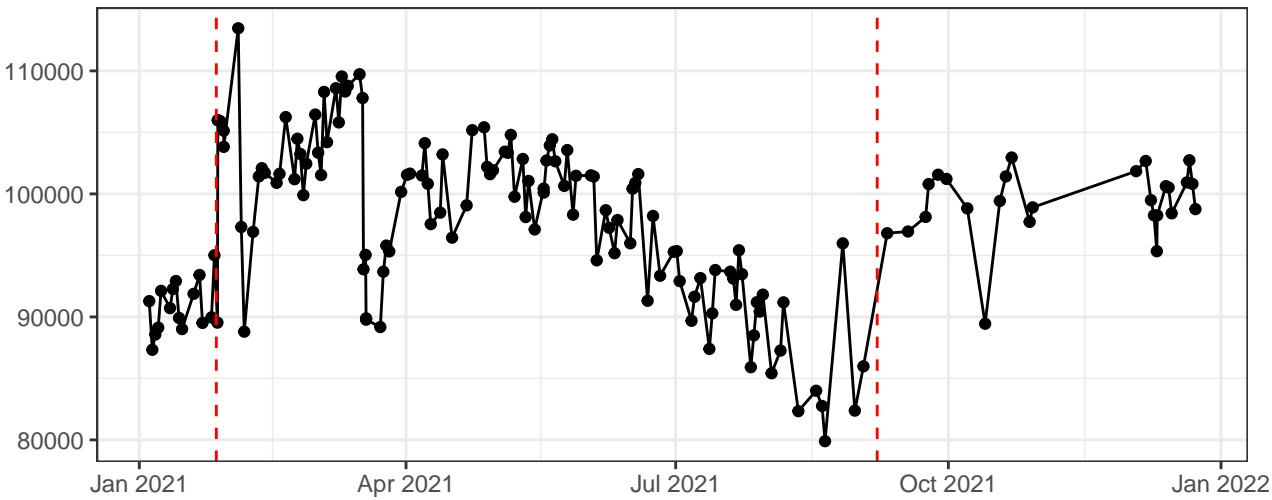


### B530-A\_Gain

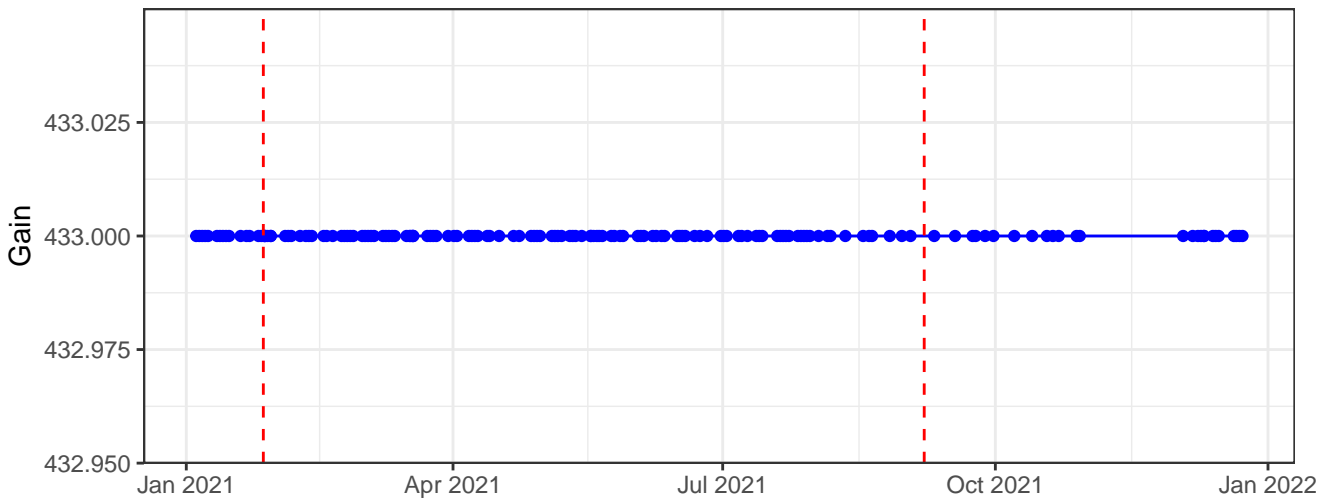


### B585-A\_Gain

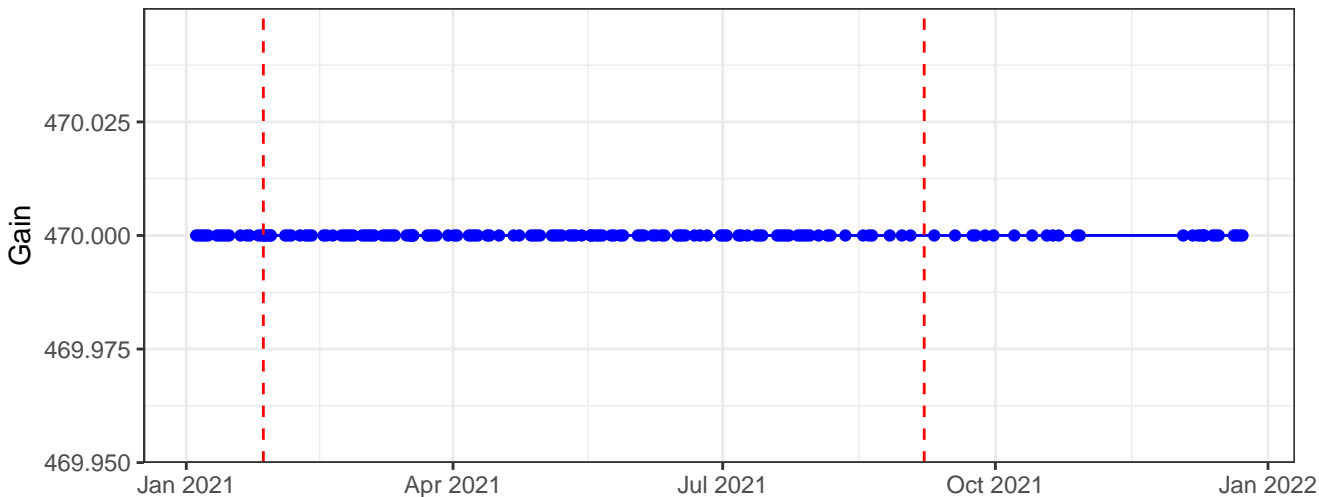


### B695-A\_Gain

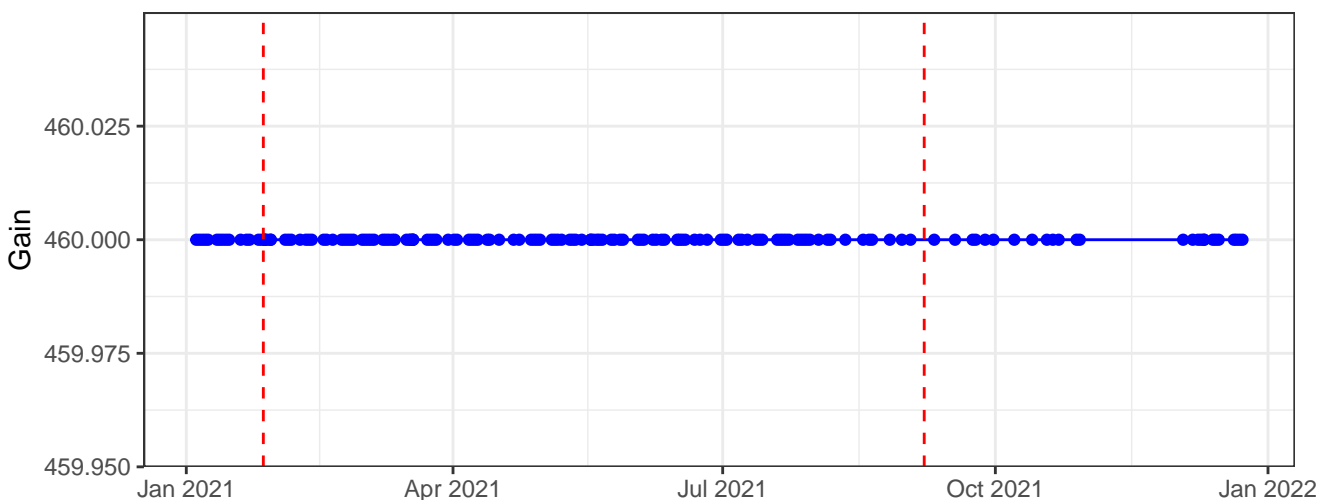


### B780-A\_Gain

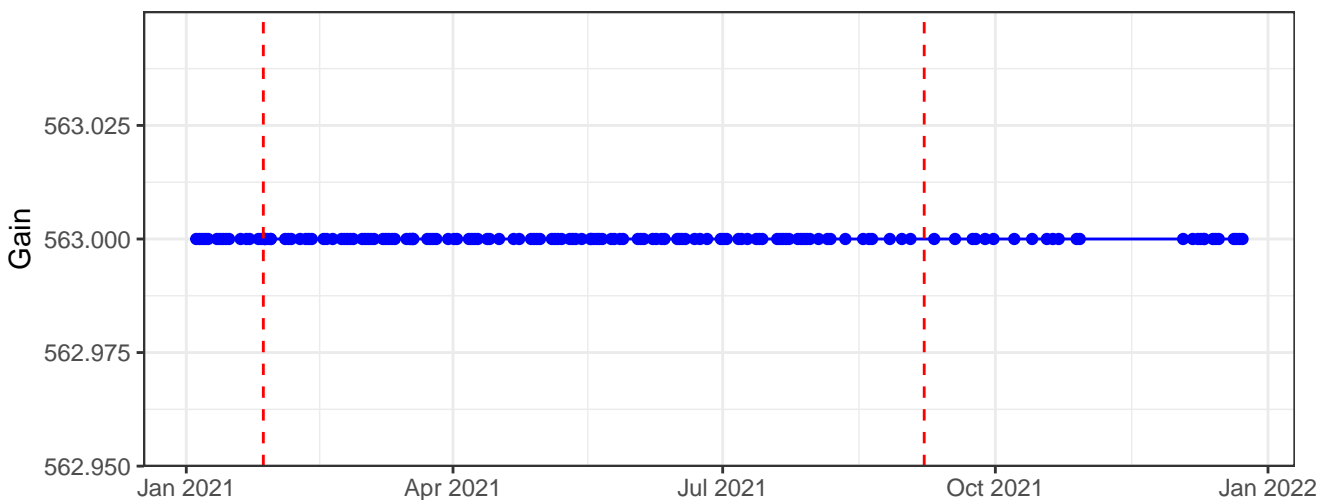


### R670-A\_Gain

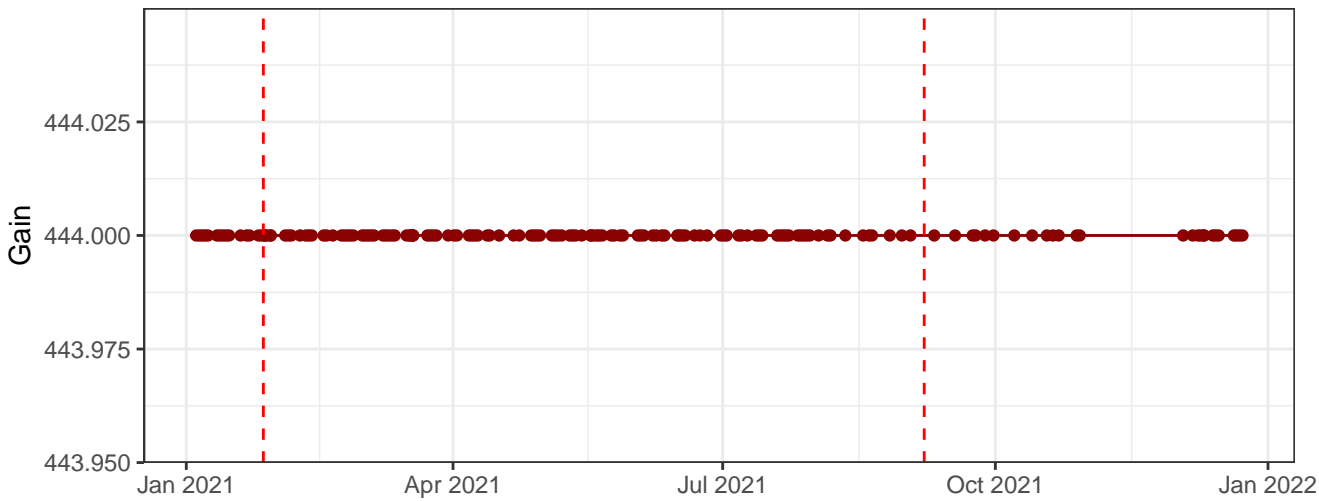


### R780-A\_Gain

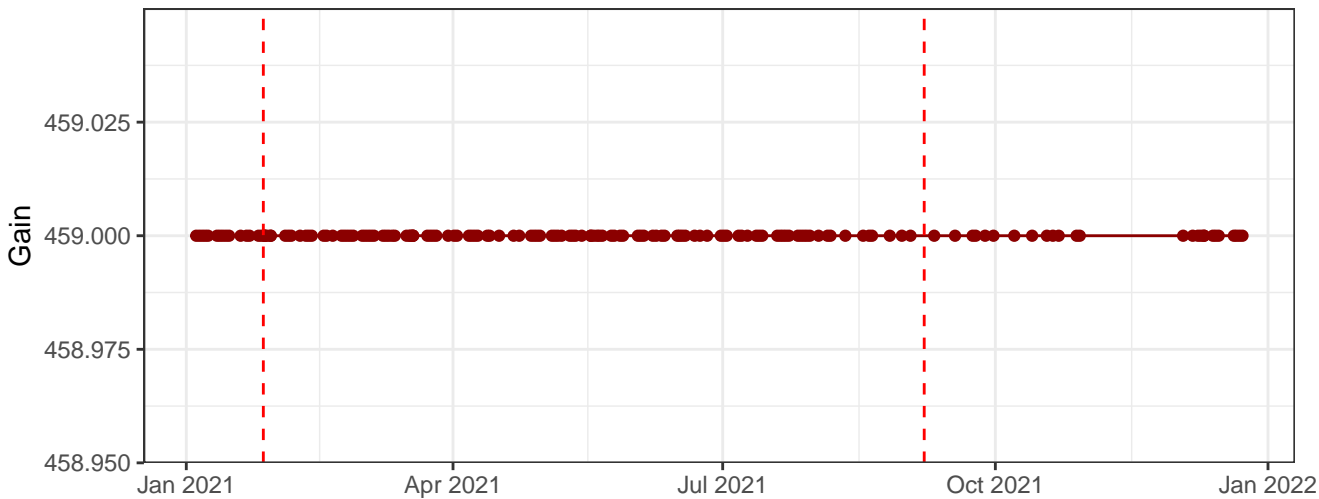


### FSC-A\_Gain

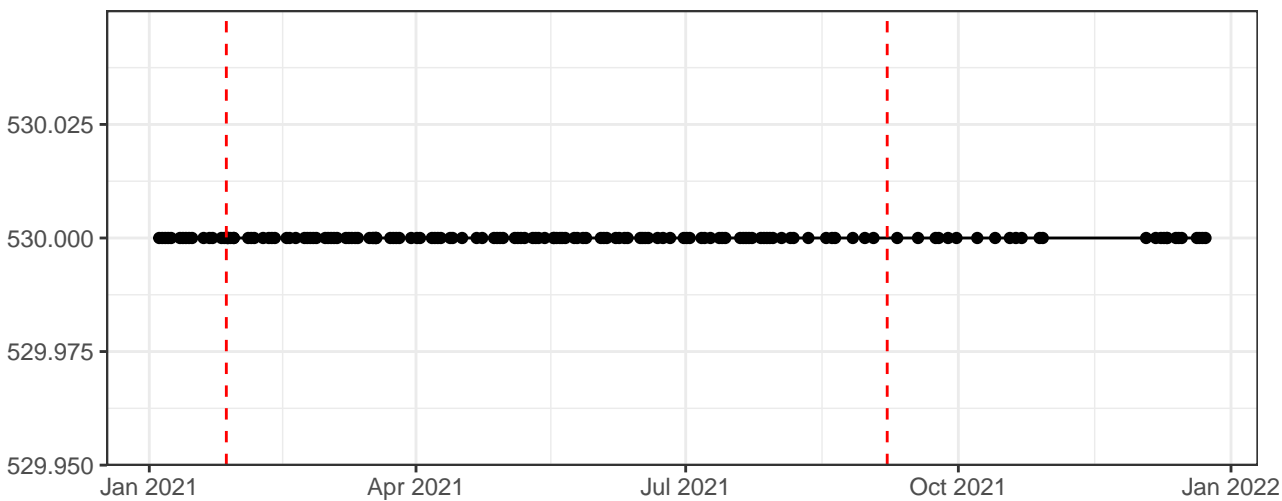


### SSC-A\_Gain

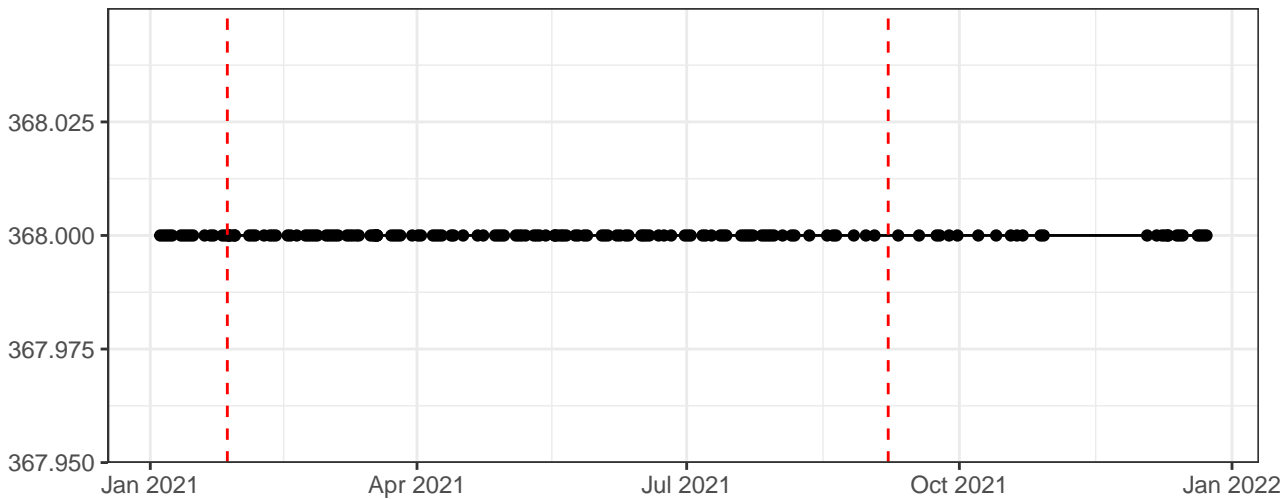

### Blue\_LaserDelay

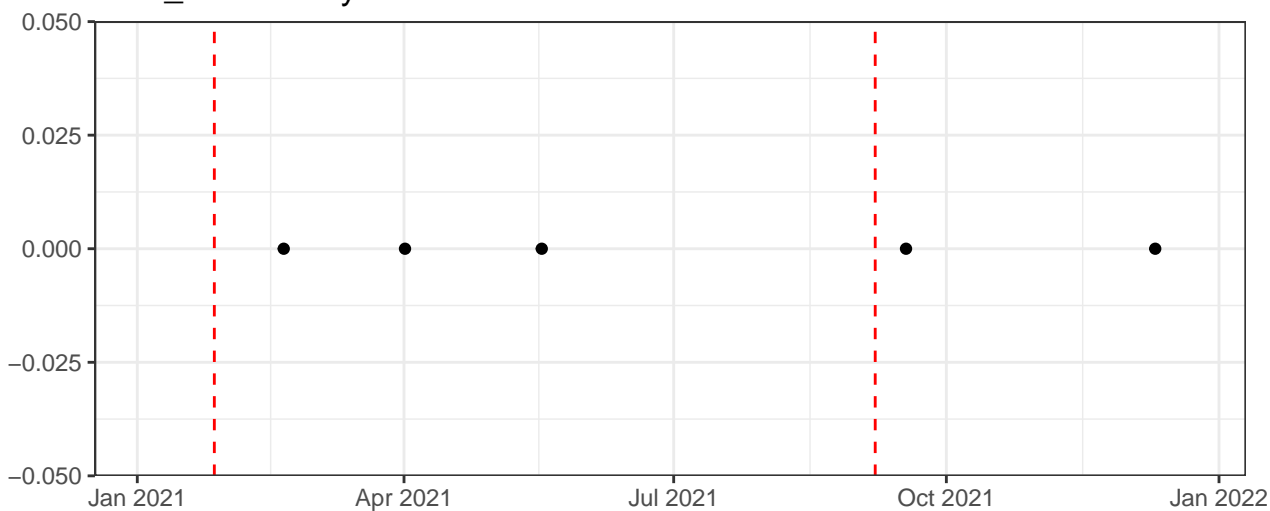


### Red\_LaserDelay

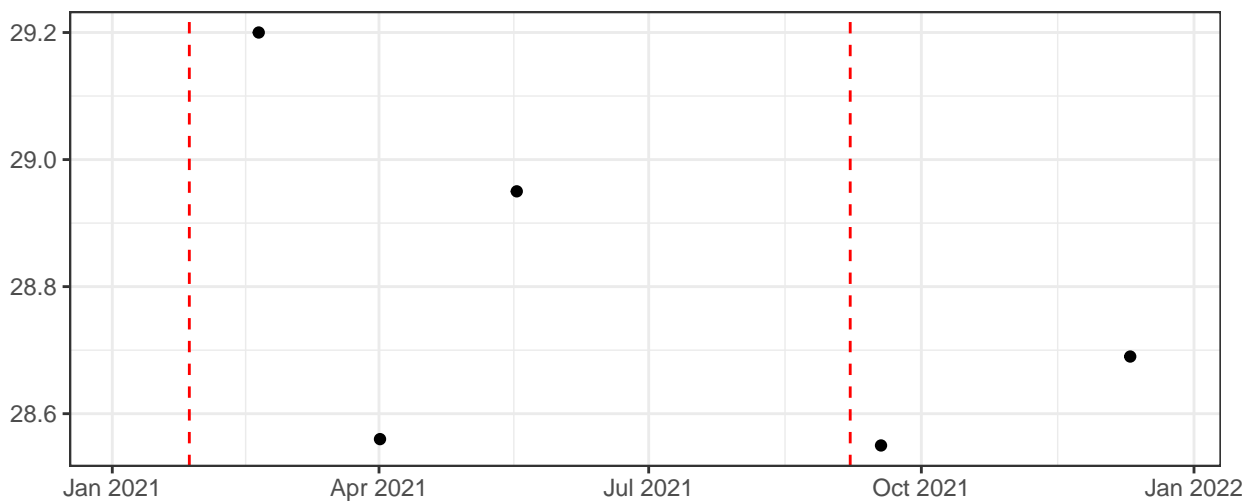



Blue\_AreaScalingFactor

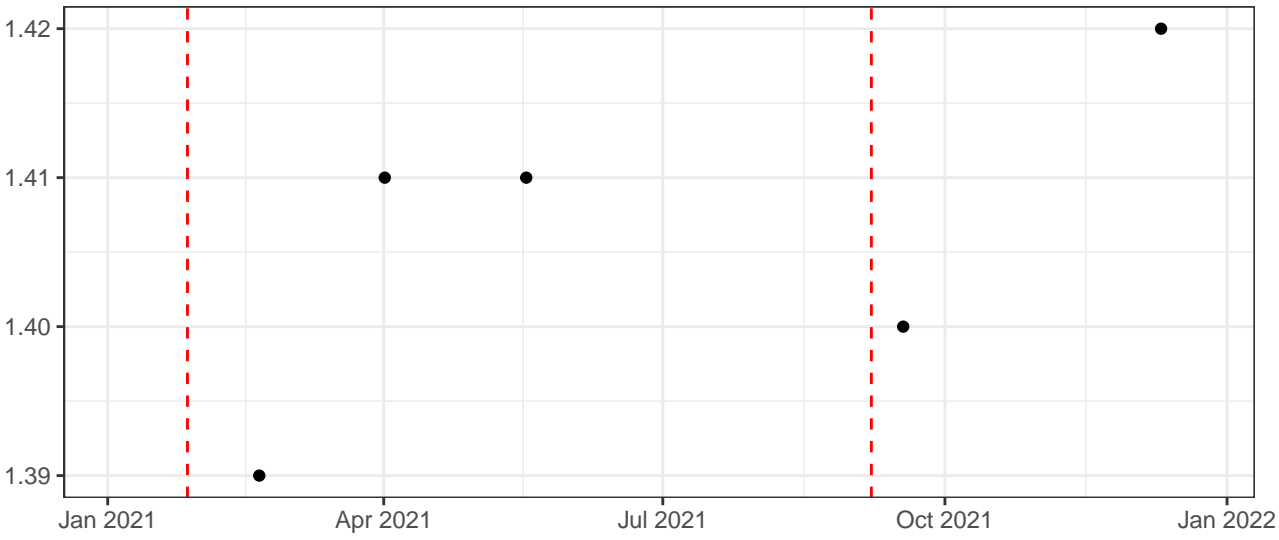

Red\_AreaScalingFactor

